

WT-506 Working Table

INSTALLATION MANUAL

Index

WT-506 (d-Color MF360/MF280/MF220)

- I. Accessory parts 1
- II. Installation procedures 2

WT-506 (d-Color MF651/MF551/MF451)

- I. Accessory parts 5
- II. Installing the working table 5



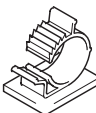
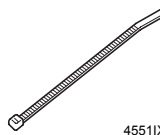
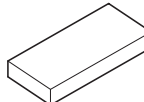

This page is intentionally left blank.

WT-506 Working Table

INSTALLATION MANUAL

Applied Machines: d-Color MF360/MF280/MF220
 COLOR MFP: 36 ppm/28 ppm/22 ppm
 Product Code: A0ED

I. Accessory parts

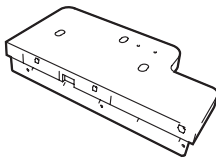No.	Name	Shape	Q'ty
1.	Working table	 A0W4IXC018DA	1
2.	Screw (4 × 16 mm)	 9J08IXC075DA	3
3.	Cord clamp *1	 A0W4IXC019DA	1
4.	Cable tie *2	 4551IXC007DB	1
5.	Cushion *2	 A0W4IXC020DA	1
6.	Authentication label *2		1

Note:

This manual provides the illustrations of the accessory parts and machine that may be slightly different in shape from yours. In that case, instead of the illustrations, use the appearance of your machine to follow the installation procedure. This does not cause any significant change or problem with the procedure.

*1 Keep the cord clamp properly for use when mounting the authentication unit.

*2 Be sure to keep the cable tie, cushion, and authentication label that are necessary for installation of the authentication unit (AU-201). They are kept inside the cover located on the underside of the working table.

WARNING




After unpacking, be sure to get rid of the packaging materials and keep them out of the reach of children.


Putting the head in the plastic bag involves danger of suffocation.

II. Installation procedures


1. Remove the knockouts (at three places) from the IR right upper cover using nippers.

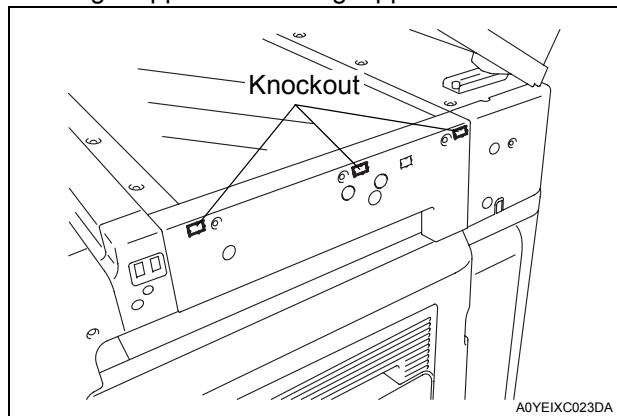


2. Remove the caps (at three places).

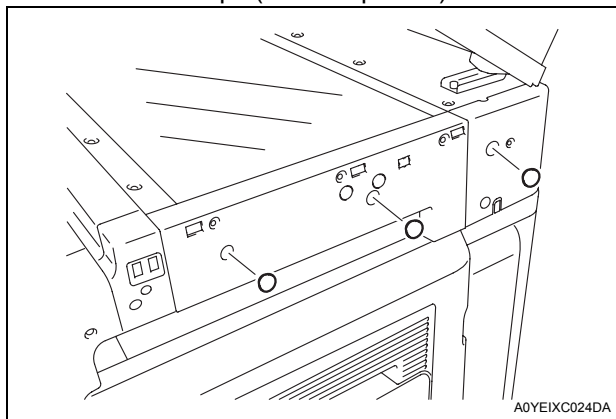

3. Insert tabs (at three places) on the working table into the holes in the machine and slide the working table in the direction of the arrow.

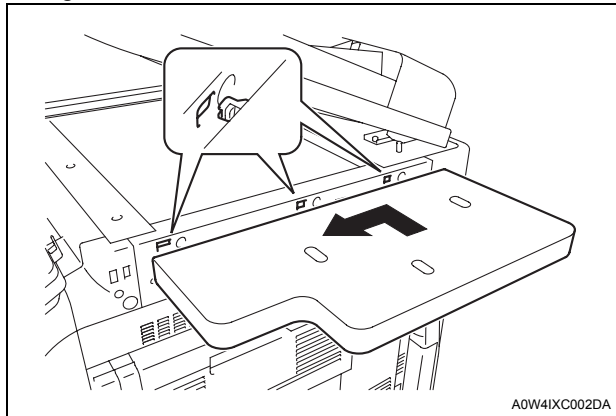


4. Secure the working table (three screws furnished with the working table).

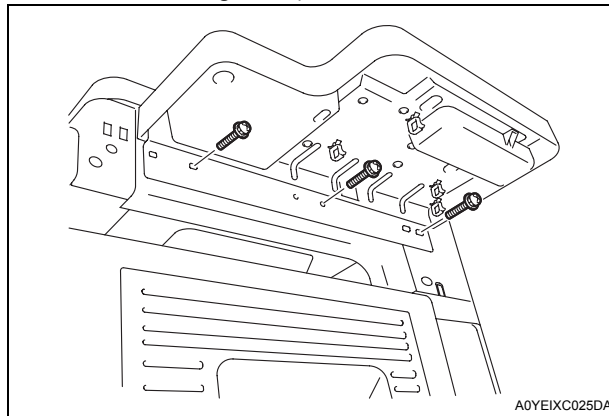


<When installing the key counter mount kit>


1. Remove the working table (three screws).
2. Remove the three screws from the IR right upper cover.

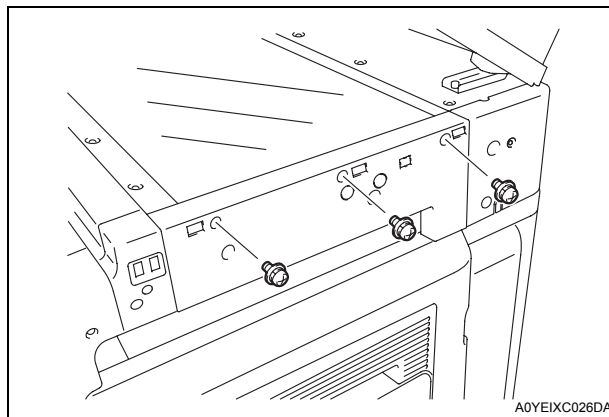


3. Remove the IR right upper cover and remove the knockout (at one place) using nippers.

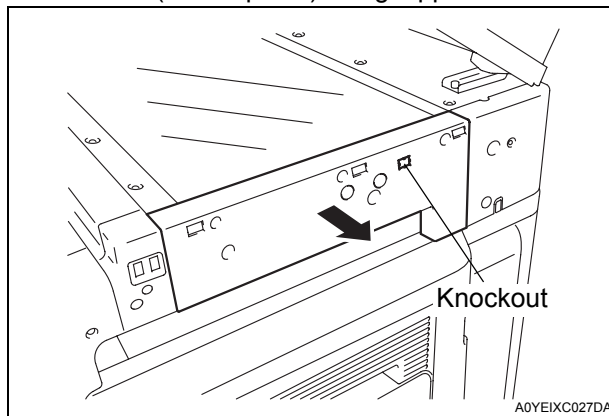

4. Remove the harness from the wire saddles (at three places).

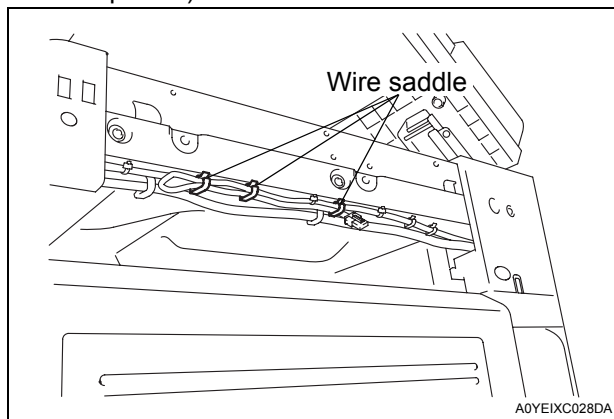


7. Run the harness through the hole on the working table as shown in the illustration below.

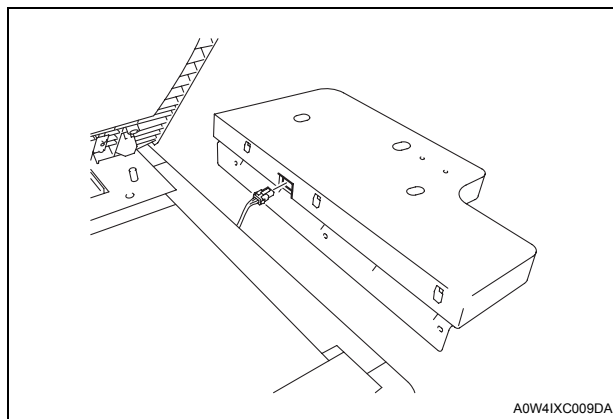


5. Attach the cover removed in step 3 (three screws).

* Run the harness through the hole made in step 3.

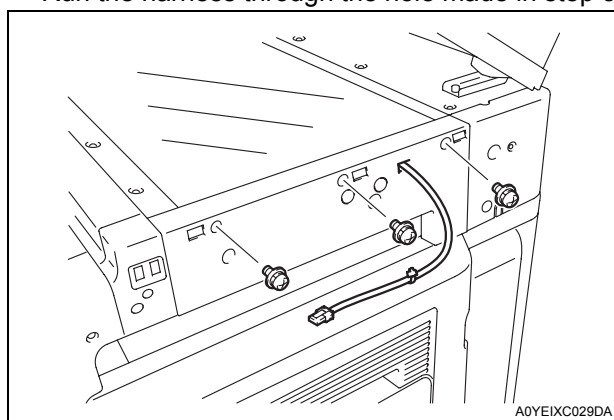


8. Attach the working table to the machine (three screws removed in step 1).


9. Remove the cap from the working table (at one place).

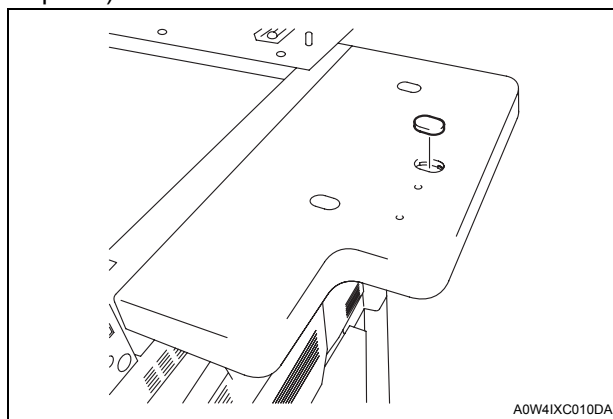


6. Remove screws from the underside of the working table, and remove the cover for the key counter harness (four screws).

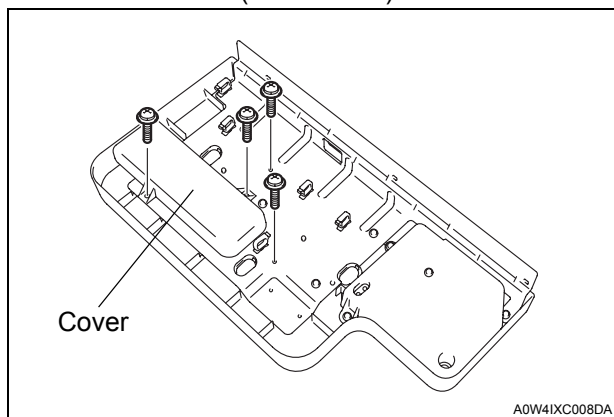


10. Attach the mounting plate of the key counter mount kit to the working table (two screws removed in step 6).

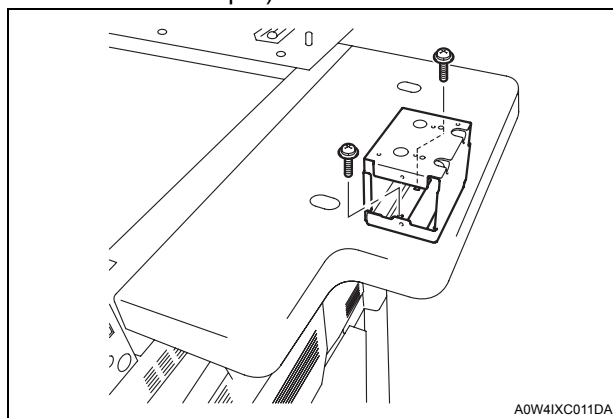


11. Attach the socket to the mounting plate (two screws furnished with the key counter mount kit).

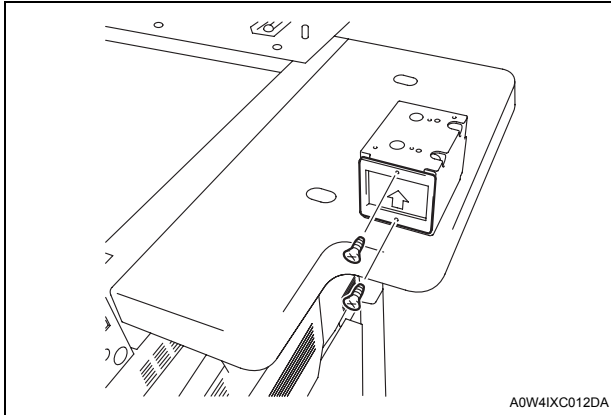


14. Attach the cover to the mounting plate (two screws furnished with the key counter mount kit).

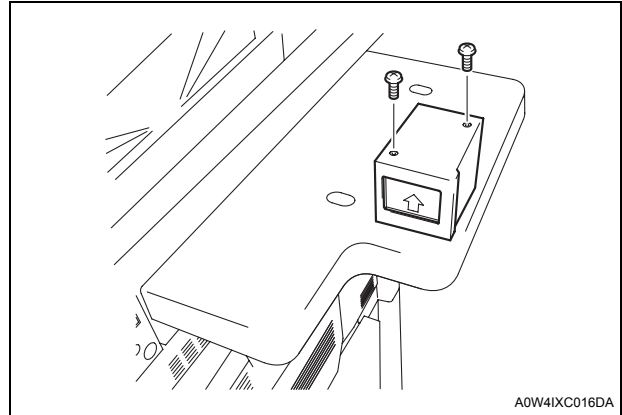


12. Insert the harness into the wire saddles (at two places) located on the underside of the working table, and run the connector through the hole and remove the connector cover.

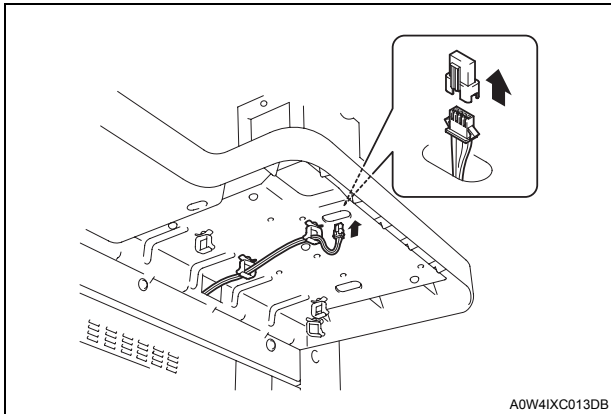

15. Attach the cover for the key counter harness that was removed in step 6 (two screws removed in step 6).

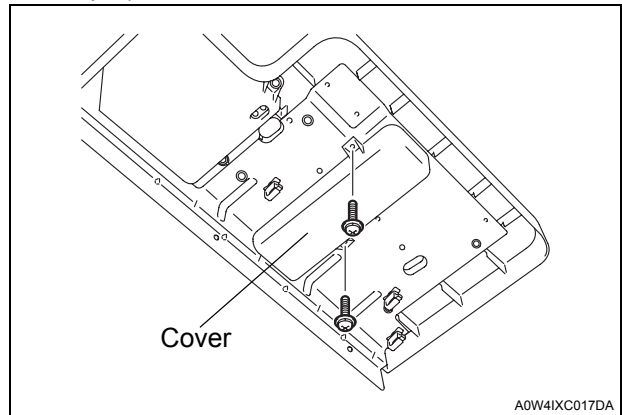

13. Insert the socket harness into the edge cover (at one place) and connect the socket connector to the connector from the machine.

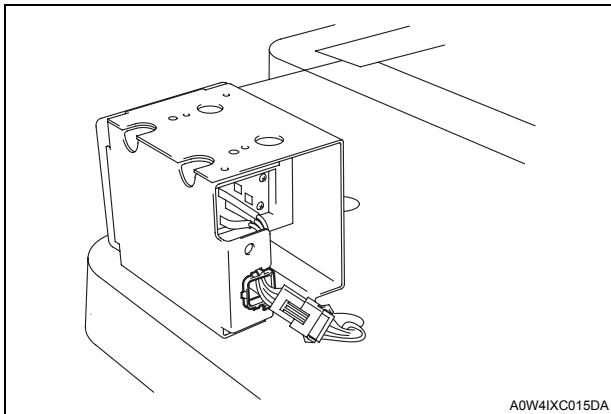

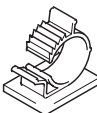
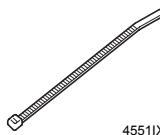
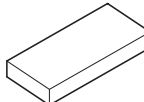



WT-506 Working Table

INSTALLATION MANUAL

Applied Machines: d-Color MF651/MF551/MF451
 COLOR MFP: 65 ppm/55 ppm/45 ppm
 Product Code: A0P0/A0P1/A0P2

I. Accessory parts

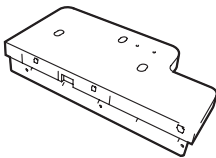No.	Name	Shape	Q'ty
1.	Working table	 A0W4IXC018DA	1
2.	Screw (4 × 16 mm)	 9J08IXC075DA	3
3.	Cord clamp *1	 A0W4IXC019DA	1
4.	Cable tie *2	 4551IXC007DB	1
5.	Cushion *2	 A0W4IXC020DA	1
6.	Authentication label *2		1

*1 Keep the cord clamp properly for use when mounting the authentication unit.

*2 Be sure to keep the cable tie, cushion, and authentication label that are necessary for installation of the authentication unit (IC card type). They are kept inside the cover located on the underside of the working table.

WARNING




After unpacking, be sure to get rid of the packaging materials and keep them out of the reach of children.


Putting the head in the plastic bag involves danger of suffocation.

II. Installing the working table


1. Using nippers, pull out the knockouts (three knockouts) from the right side surface of the machine.

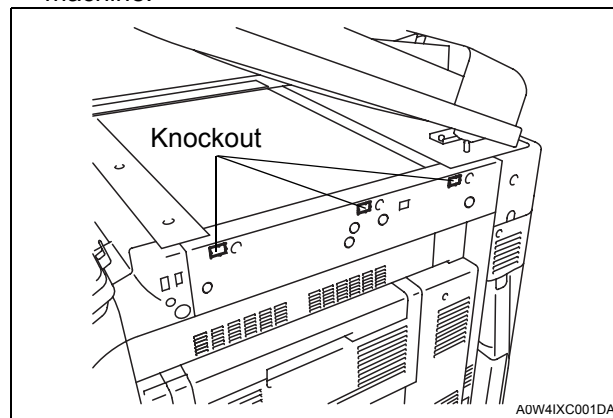


2. Remove the three caps.

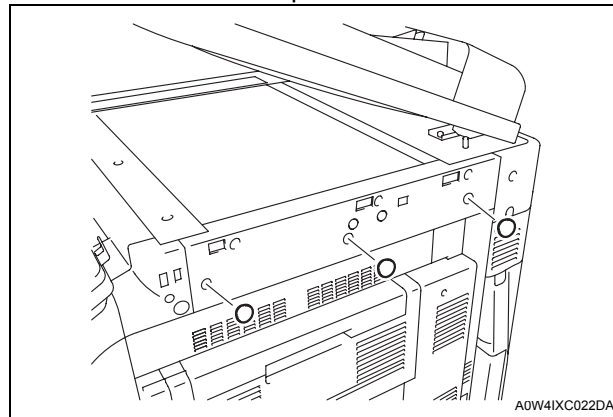


3. Insert tabs (three knockouts) on the working table into the holes in the machine and slide the working table in the direction of the arrow.

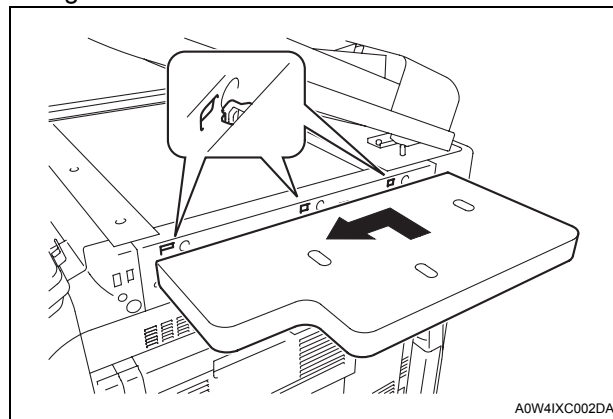

4. Secure the working table (three screws furnished with the working table).

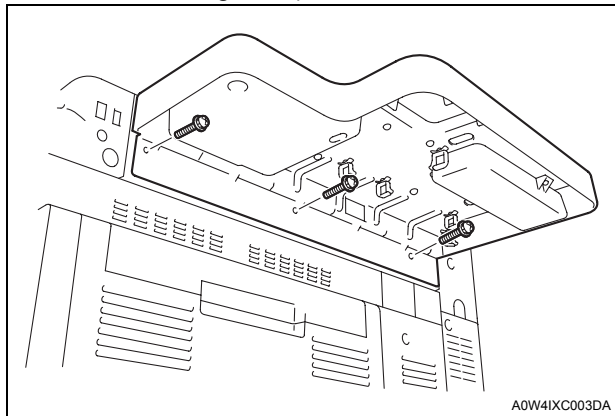


4. Open the right door of the machine.
5. Remove the harness from the wire saddles (at five places) and the edge cover (at one place).

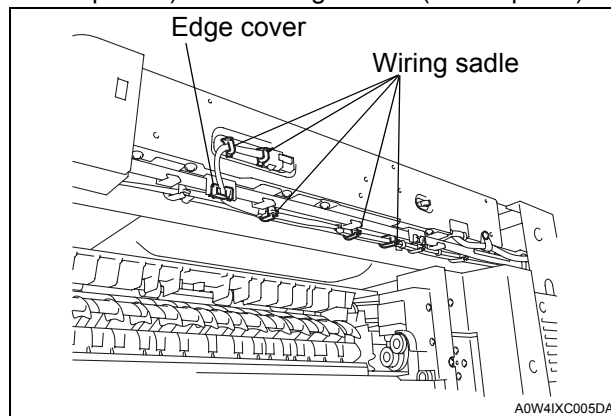


<When installing the key counter mount kit>


1. Remove the working table (three screws).
2. Remove three screws that hold the right side cover of the machine. Remove one screw that holds the right rear cover in place.

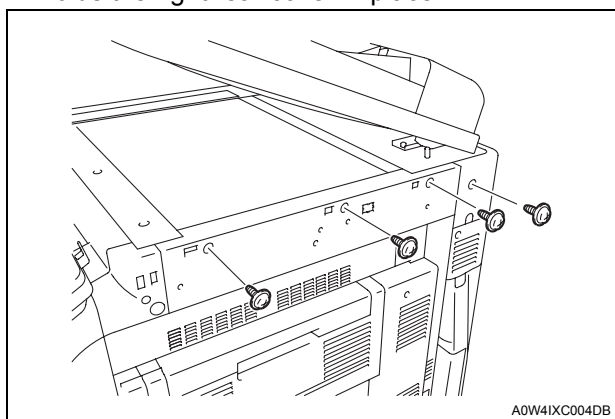

3. While moving the right side cover in the direction of the arrow, remove the cover. Remove the knockout (one place), using nippers.

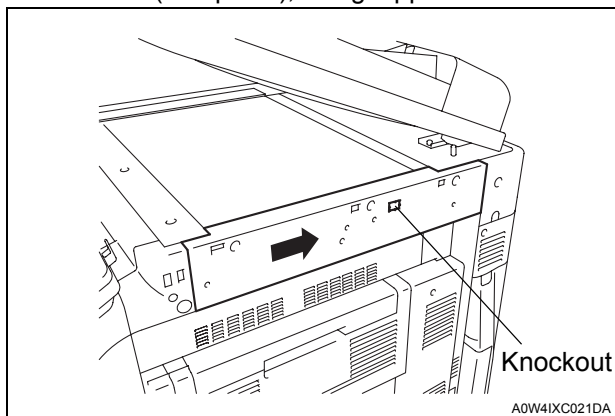


6. Insert the harness into the wire saddle (at one place) and the edge cover (at one place).

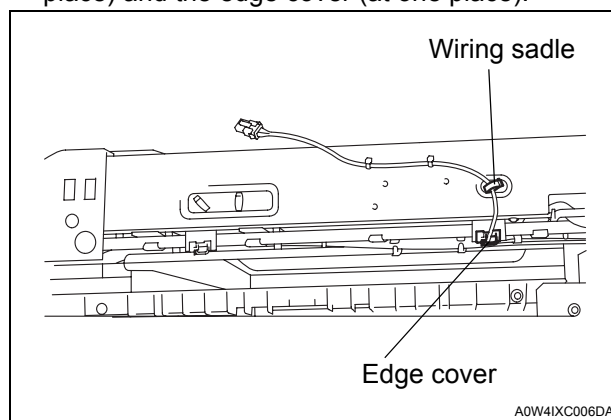


7. Attach the right side cover removed in step 3 (with four screws).


* Run the harness through the hole made in step 3.

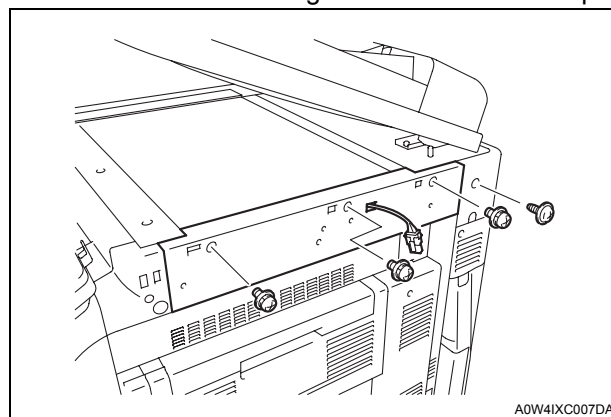


8. Close the right door of the machine.
9. Remove four screws from the underside of the working table. Remove the cover for the key counter harness (with four screws).

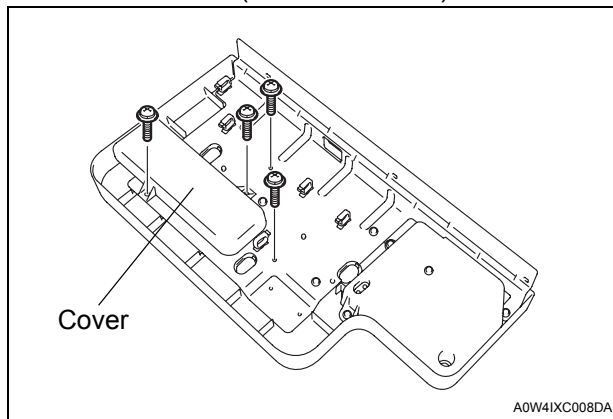


10. Run the harness through the hole on the working table as shown in the illustration below.

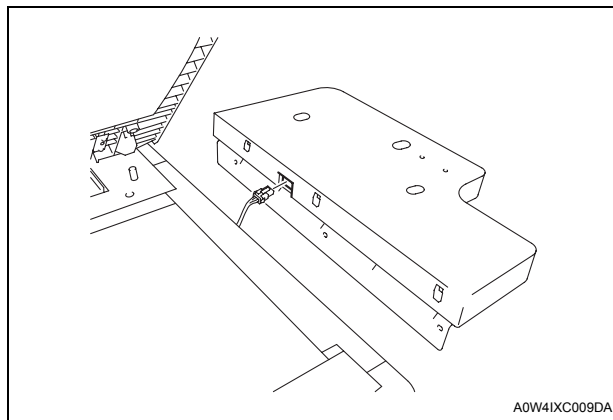


11. Attach the working table to the machine (with three screws removed in step 1).
12. Remove the cap from the working table (at one place).

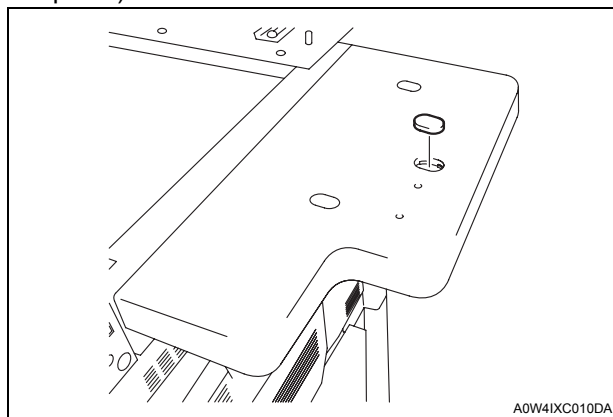


13. Attach the mounting plate that is included in the key counter mount kit to the working table (with two screws removed in step 9).

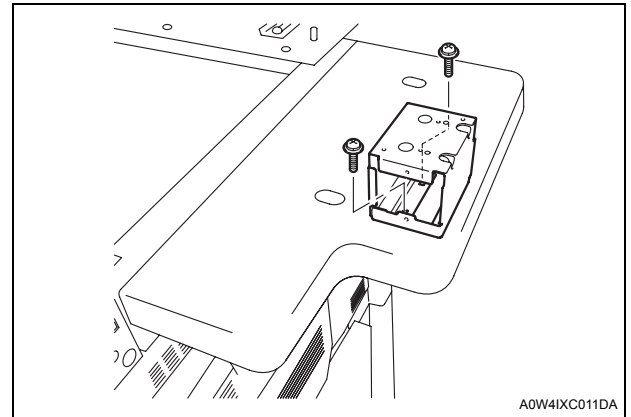


14. Attach the socket to the mounting plate (with two screws that are included in the kit).

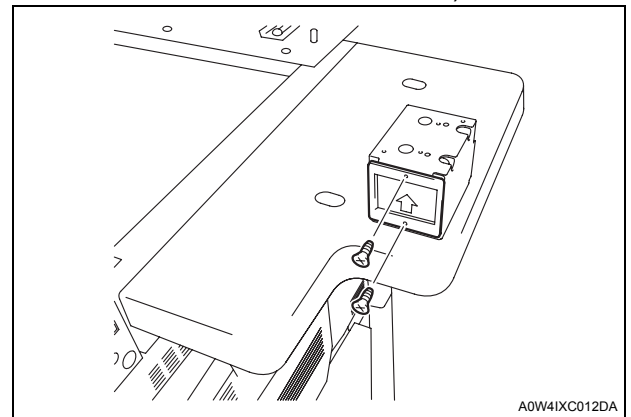


15. Insert the harness into the wire saddles (at two places) located on the underside of the working table. Run the connector through the hole and remove the connector cover.

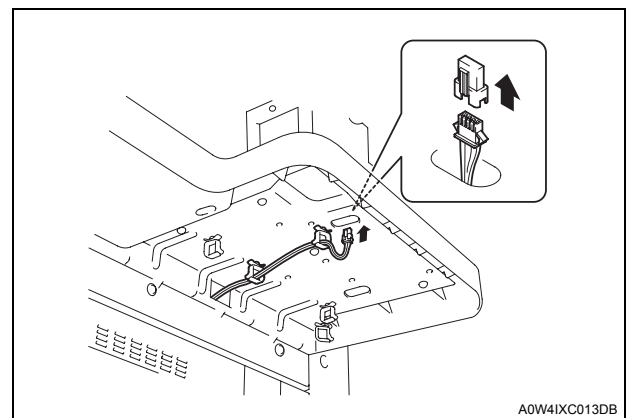

16. Insert the socket harness into the edge cover (at one place) and connect the socket to the connector from the machine.

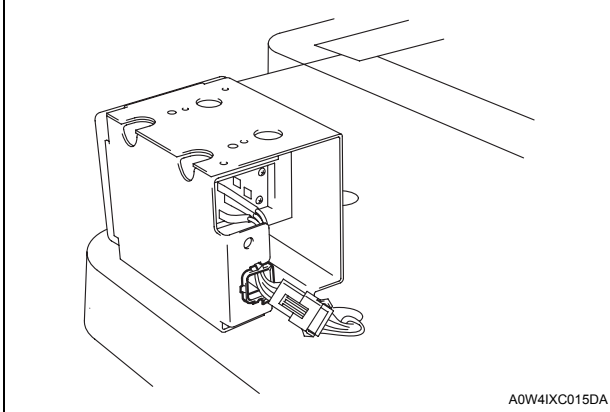

17. Attach the cover to the mounting plate (with two screws included in the kit).

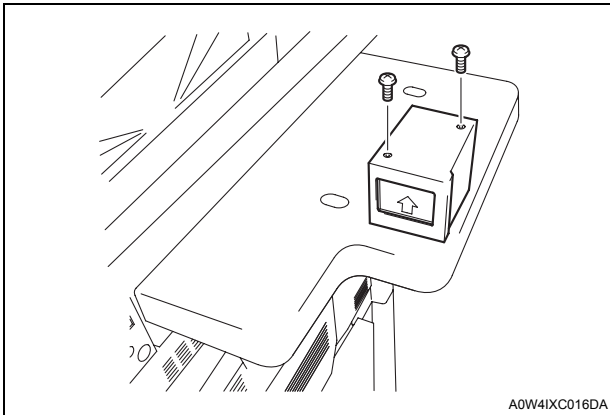

18. Attach the cover for the key counter harness that was removed in step 9 (with two screws removed in step 9).

